


Installation Guide (FIX SERIES)


FIX


V· 9 0

Warning

Should the screen install in cold weather (Temperature below 18 degrees), please warm up the screen by opening it and leave it with the room heater for an hour to allow fabric to expand. This measure is to prevent the fabrics from tearing.

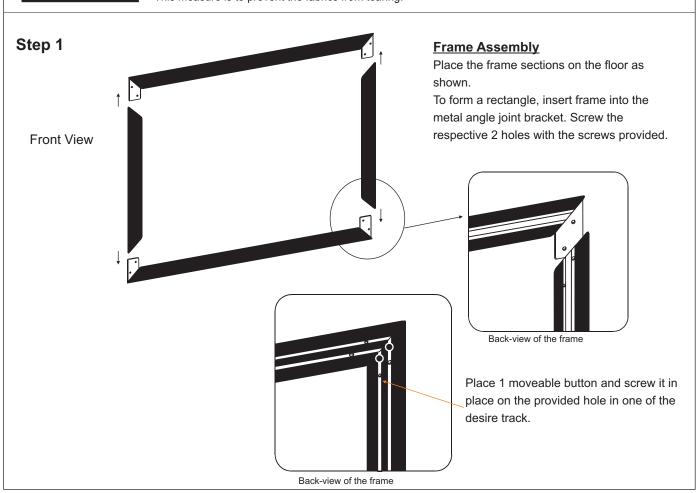

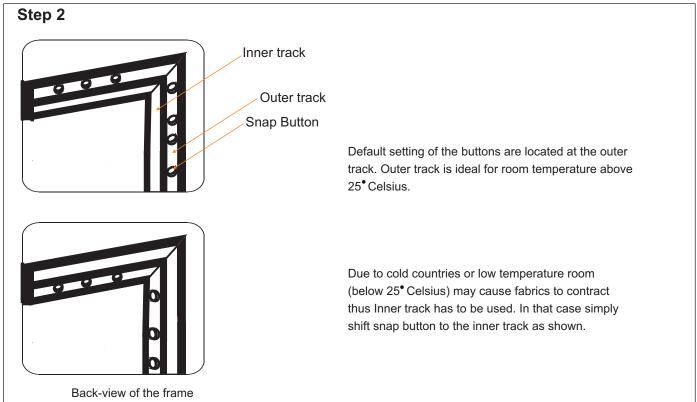


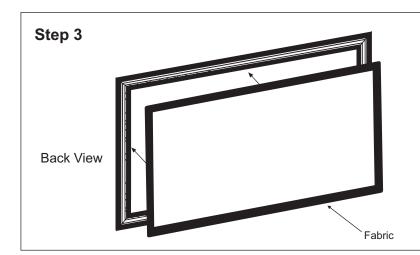

Screen Fabrics Assembly


Lean the frame with buttons facing you. Place screen fabrics on the frame with the projection surface facing in front.

Step 4

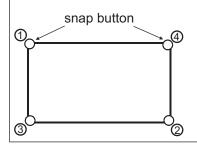

Button the corner of fabric onto the frame starting from one corner indicated as ① . Proceed with diagonal corner 2 follow by 3 and 4 as shown in the picture.


Step 5

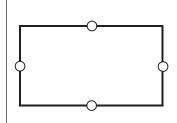

Button the fabric on the frame starting from the midd of each edges as shown. Snap up for the rest of the buttons.

Step 6 Fix up the vertical support frame as shown.


(Note: For FIX-1612V to FIX-3721H series, please proceed to Step 7)

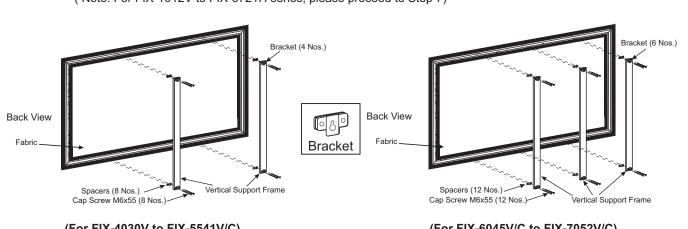


(For FIX-4030V to FIX-5541V/C)

(For FIX-6045V/C to FIX-7052V/C)

Step 7

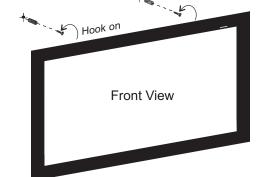

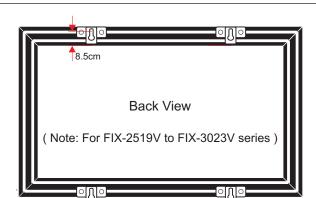

Ceiling Positioning

The screen is provided with adjustable brackets which allow ease of installation.

Important Notes:

All screens are thoroughly inspected and fully tested operational in factory.

We accept no liability whatsoever for any losses due to improper installation, operation, or any unauthorized alternation at the point of installation.

All trademarks contained in this installation guide are the property of their respective owners.