


Installation Guide (For XXL Screen)


XXL

Warning


Caution with main supply and live wires. Install with qualified technician or trained personnel.

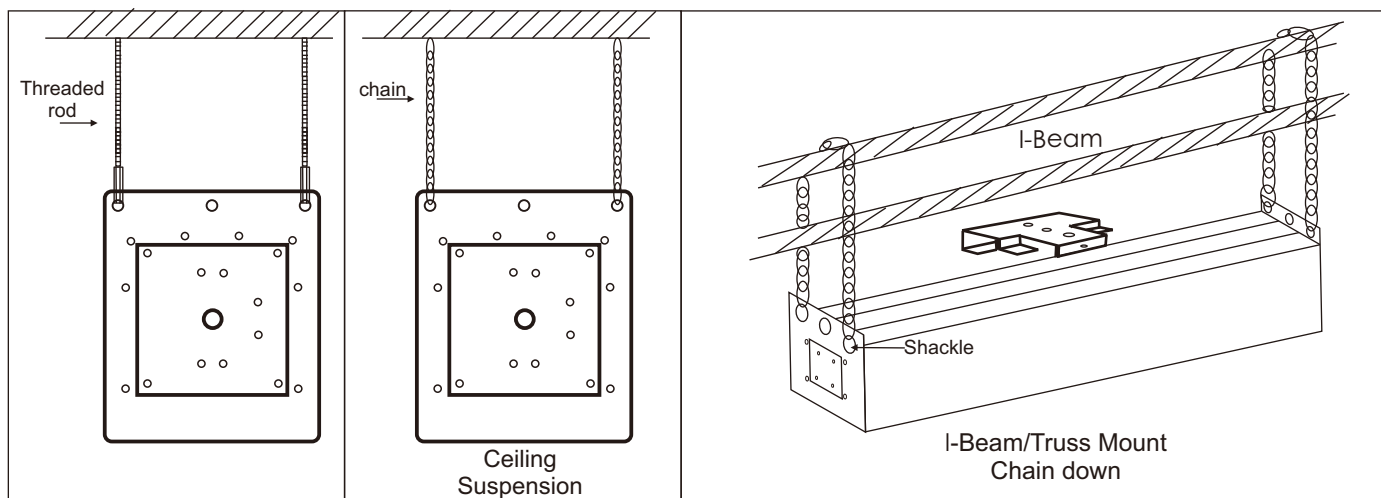

Accessories Included:

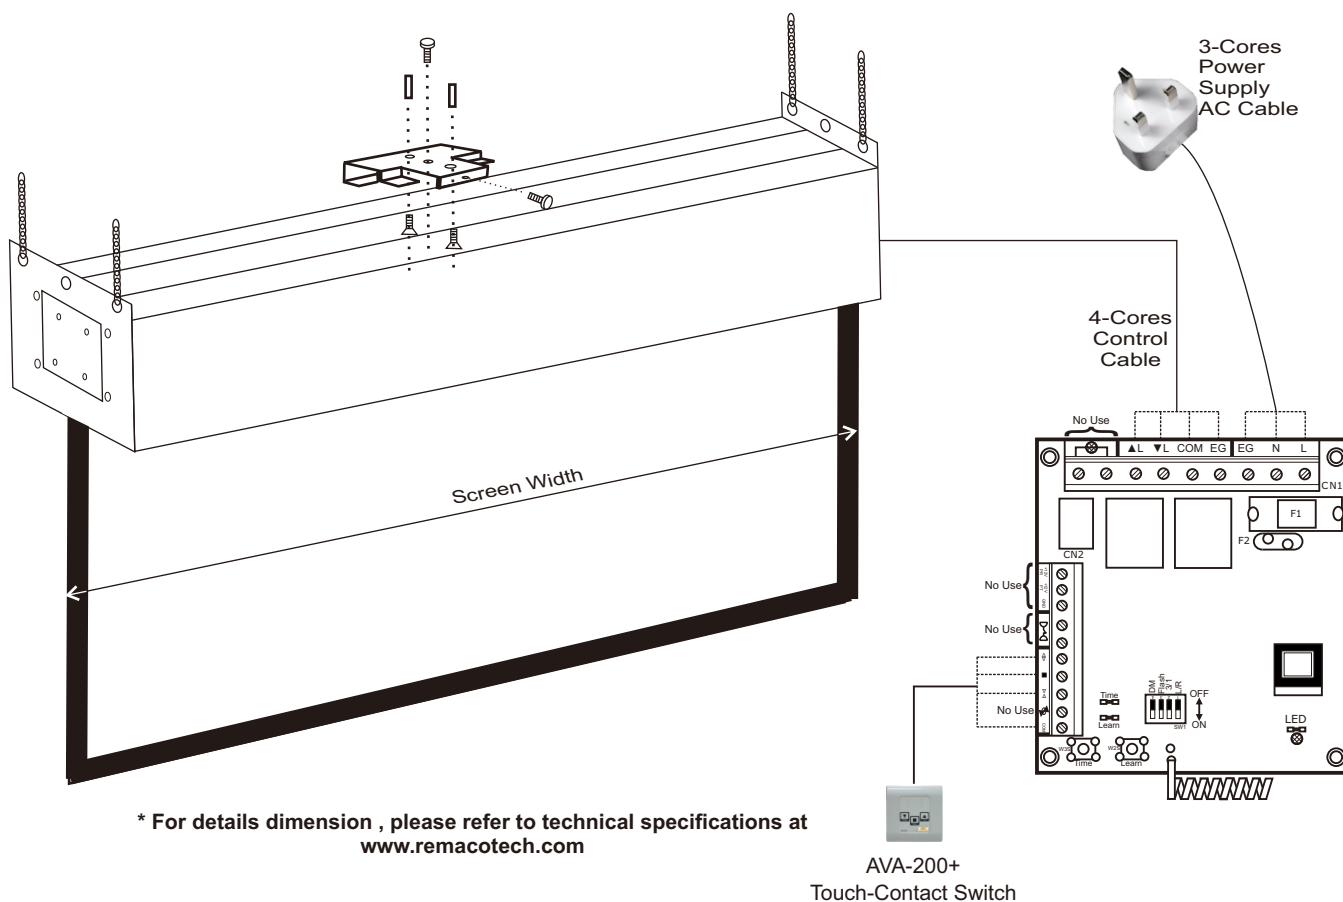

To set screen to your desired “up” and “down” positions.

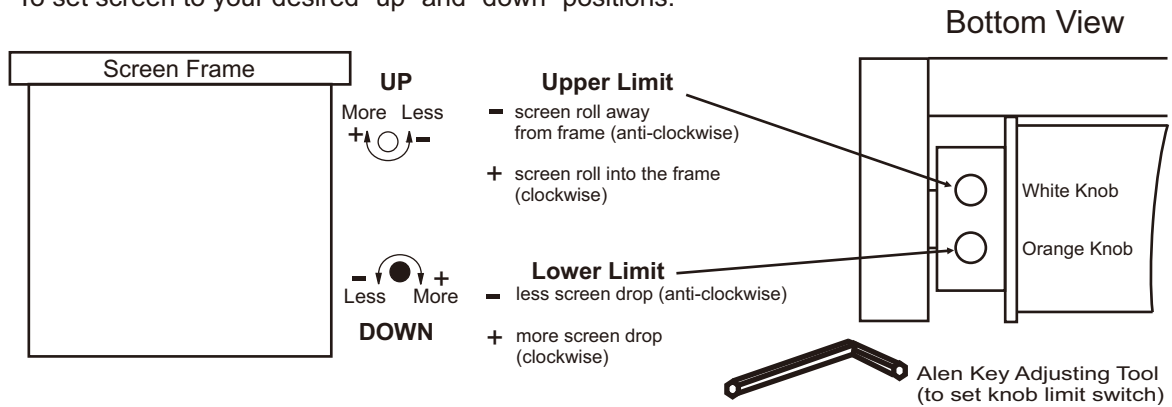

Important Note

The upper limit and lower limit of the screen had been preset in factory. Any adjustment to these 2 limit switches may cause damages to the screen fabric. If adjusted, it will cause the following problems:


- The screen will roll into the frame and stop by force and not by the Upper Limit switch.
This will cause overheating of motor which unable the screen to operate properly.
- The depression of the bottom bar onto the fabric will cause horizontal mark on screen surface.
- Adjusting the Lower Limit of the screen any lower than beyond the STOP sticker may cause the fabric to drop off





Disclaimer

Any adjustment to these 2 limit switches will void the warranty for the screen and Remaco will hold no responsibility for any damages to it. Please consult us if it is necessary to do any adjustment to the limit switch.

Connection Details for AVA-351A Receiver , AVA-200 Wall Switch and Motor

To connect between AVA-351A and use suitable DC cable (wire gauge AWG 22)

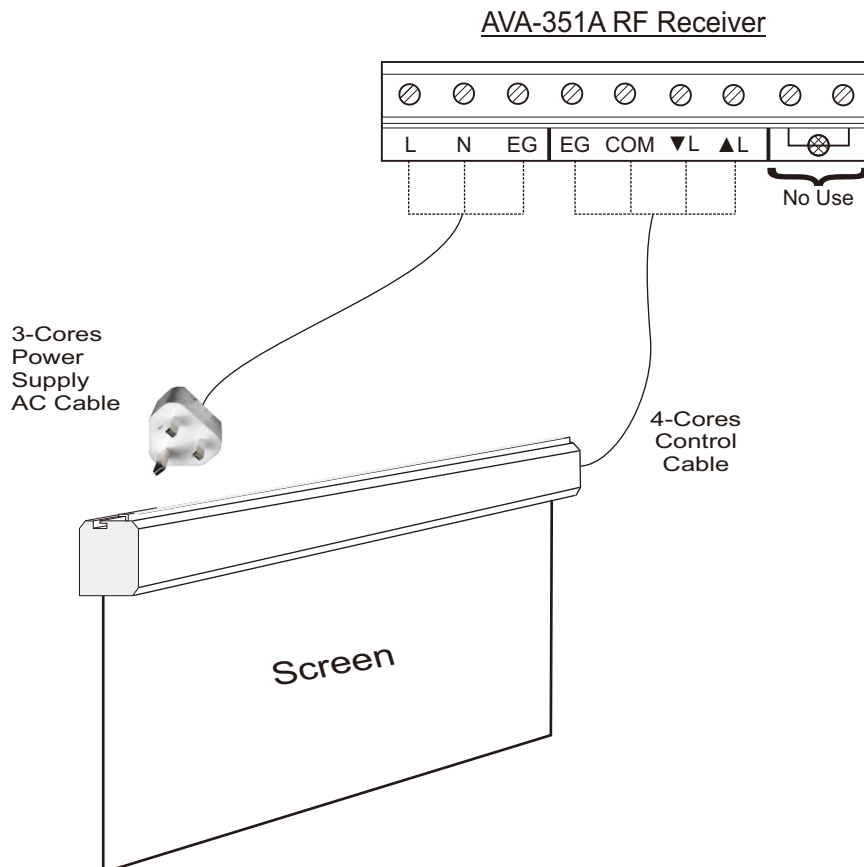

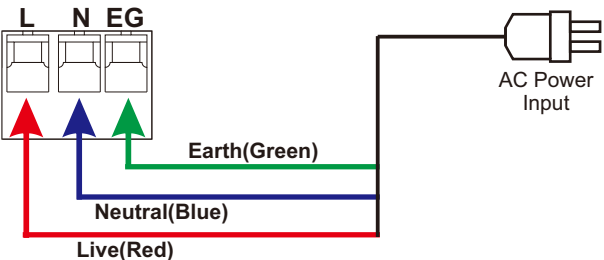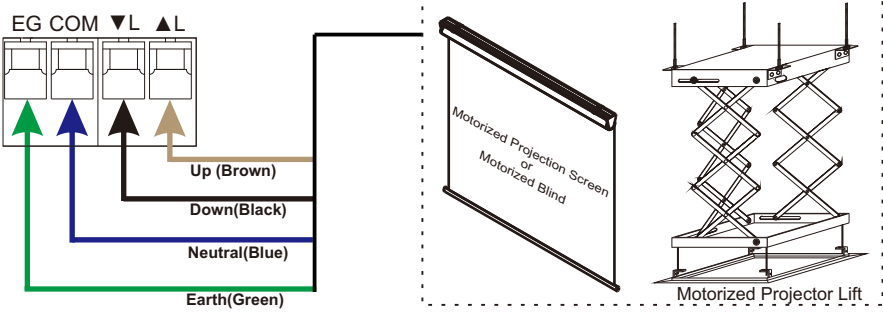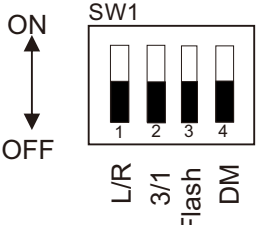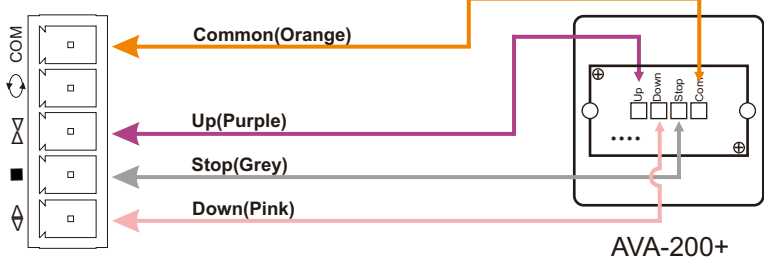Title / Connector	Application
Power	<p>Connect to a 230V power supply.</p> 
Controlled Equipments	<p>Connect to motorized screen or projector lift as shown.</p> 
Dip Switch	<p>All dip switch set to “off” position.</p> 
Contact Closure (Momentary)	<p>Connect contact closure (momentary) as shown.</p> 
Pairing of Receiver & RF remote	<p>Programming (Pairing) of Receiver & RF Remote:</p> <ul style="list-style-type: none"> - Press the Learning button on the receiver, LED turns red. It indicates learning mode activated and waiting for remote signal. - While LED is turn on, press RF remote Learning button twice, LED blinks for several times - LED turns off indicate pairing is successfully.
Delete Receiver Memory	<p>Delete Receiver Memory:</p> <ul style="list-style-type: none"> - Press and hold the Learning button on the receiver for 8seconds until LED blink one time, follow by another blink. - Release button and LED turn off fully. - It indicates all memory has been deleted successfully.
Setting Motor Movement Time	<p>Setting Motor Movement Time on AVA-351A:</p> <ul style="list-style-type: none"> - Motor movement time can be adjustable from 5 to 210seconds. - Press and hold Time button and LED blink one time indicate ready to programme movement time. - Press & hold Time button until required time is needed and then release the button (As indication you are still in setting time mode, LED will continue blinking until button is released.) <p>Remarks: Default time is 210seconds.</p>