


Installation Guide (For AVA-361-RX)


AVA-361-RX

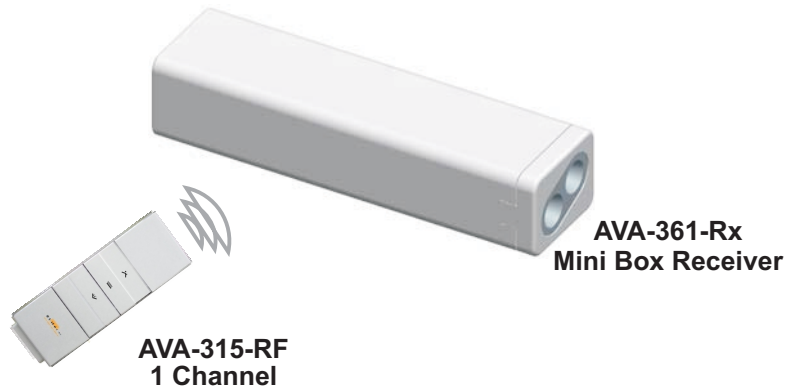

All controls support 230V/50Hz & 120V/60Hz





Control Range

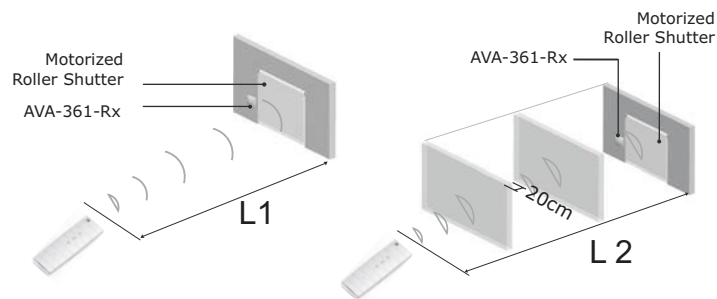


	L1 Open	L2 Partition	Emission frequency
230AV / 50Hz	200m	35m	433 MHz
120AV / 60Hz	200m	35m	

Circuit installation

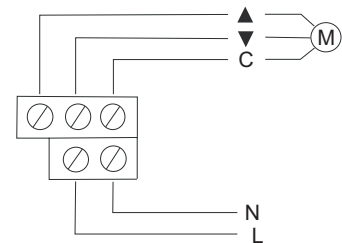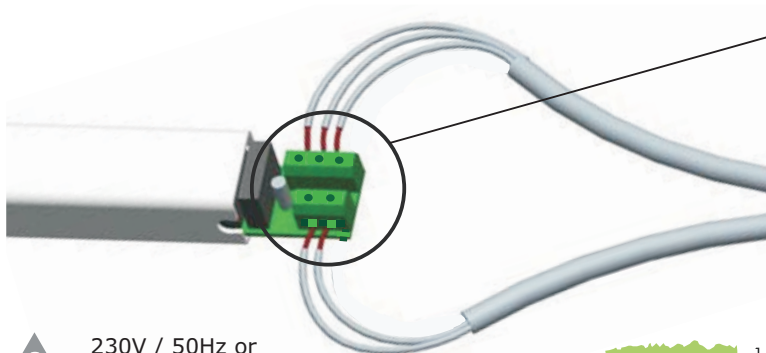


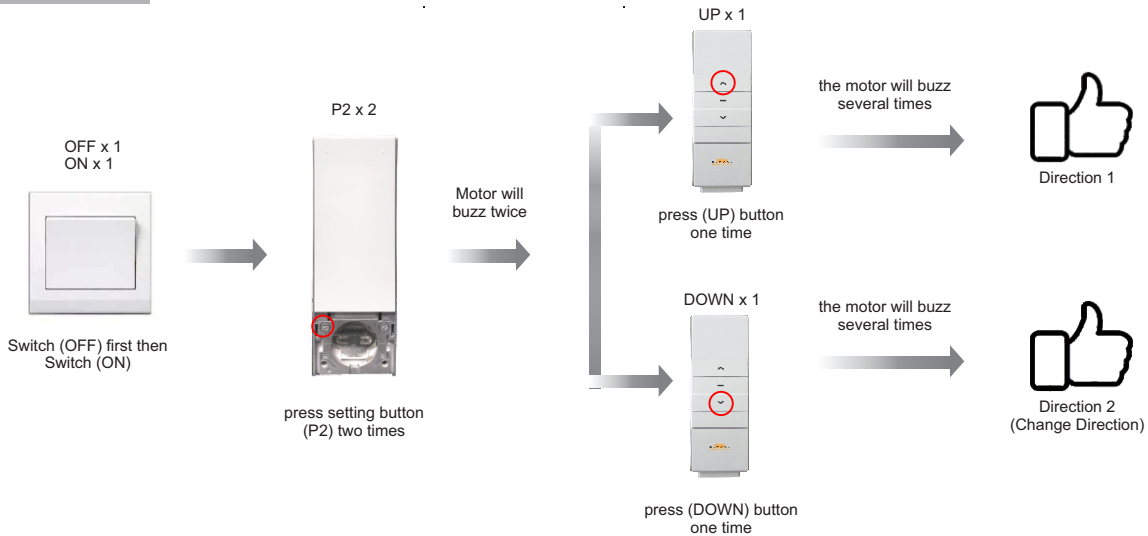
230V / 50Hz or 120V / 60Hz according to product nameplate

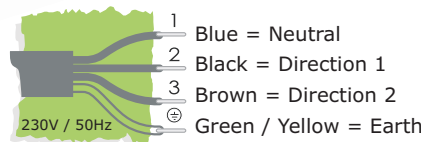

SETTINGS 1


Pairing Radio-Frequency Remote


 The interval of re-switch ON/OFF must be over 10 seconds.



SETTINGS 2


Adding Second Remote


 The interval of re-switch ON/OFF must be over 10 seconds.

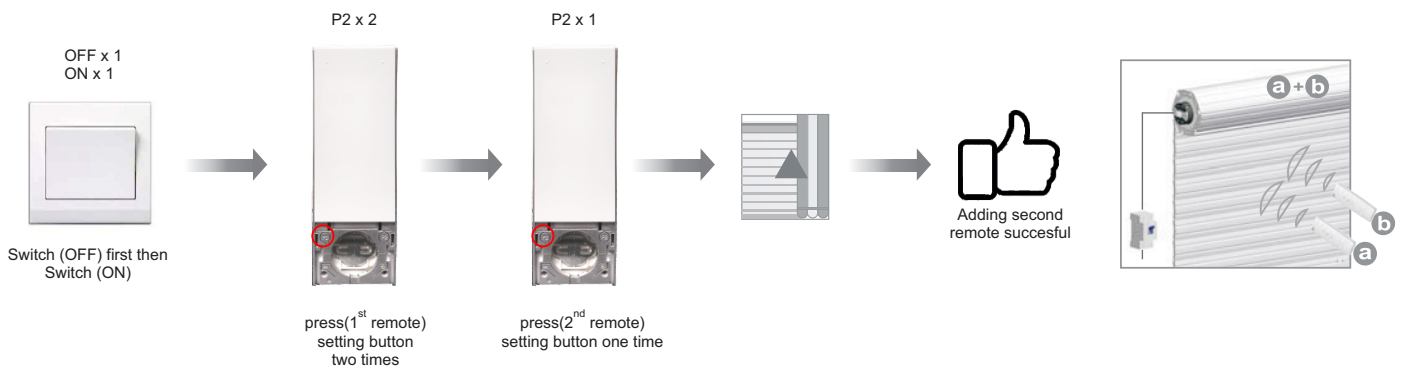

SETTINGS 3


Dot-move setting

 The interval of re-switch ON/OFF must be over 10 seconds.

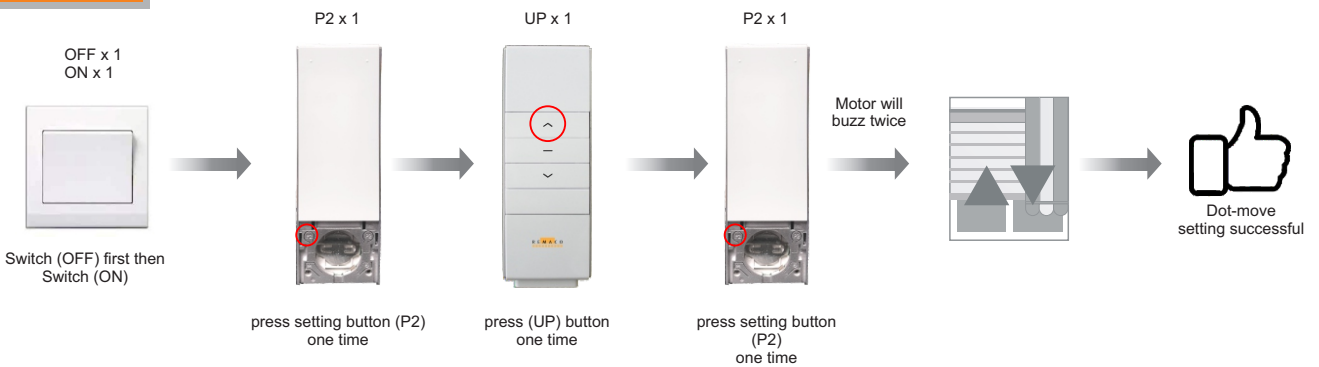

SETTINGS 4

Delete Remote and Receiver Memory

 The interval of re-switch ON/OFF must be over 10 seconds.

