


Installation Guide (PLT-416)

V: 9.0



PLT




Warning

Caution with main supply and live wires. Install with qualified technician or trained personnel.

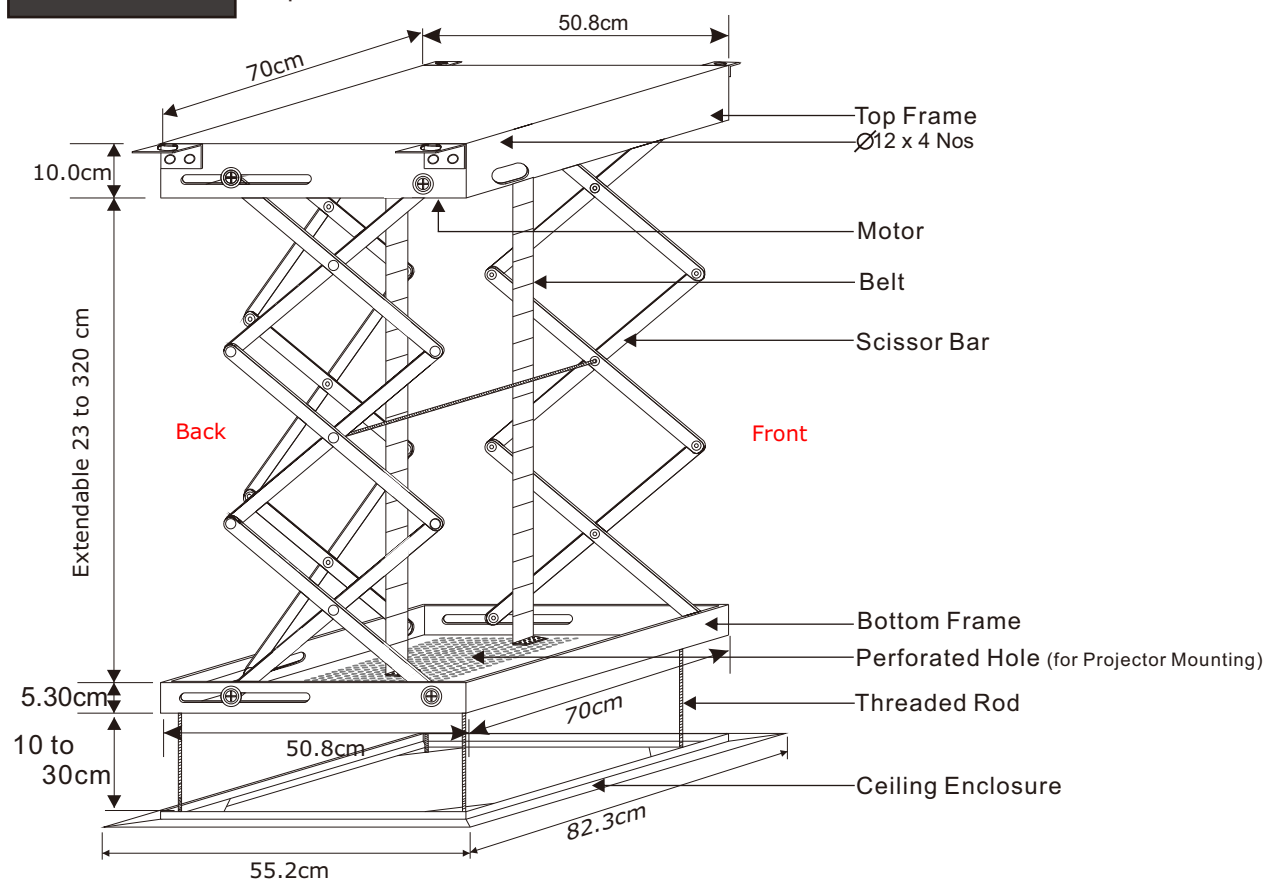


Types of Installation Mounts

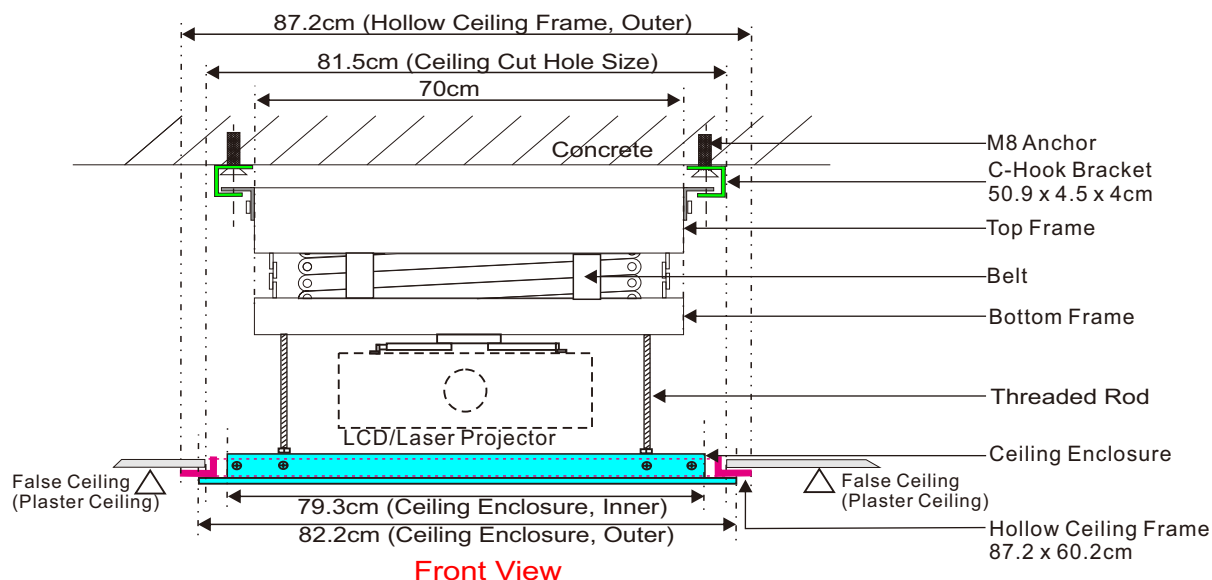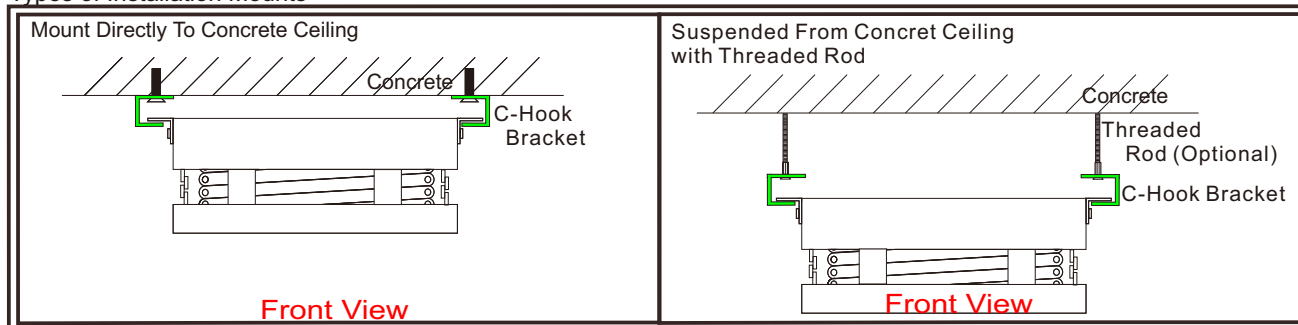

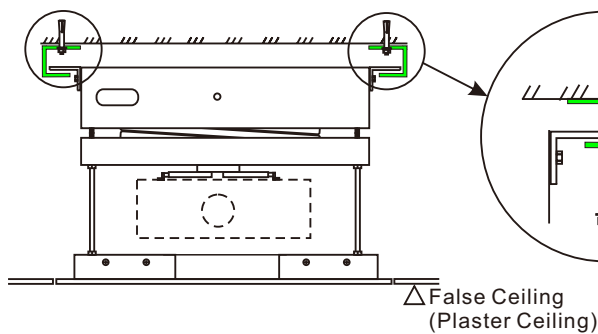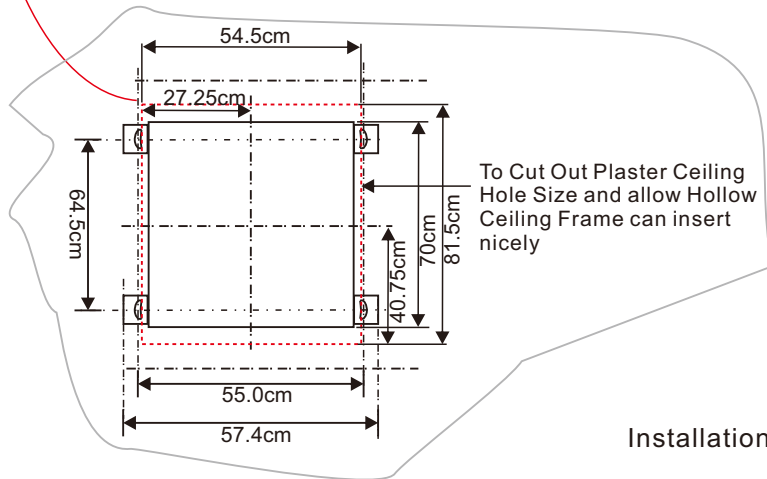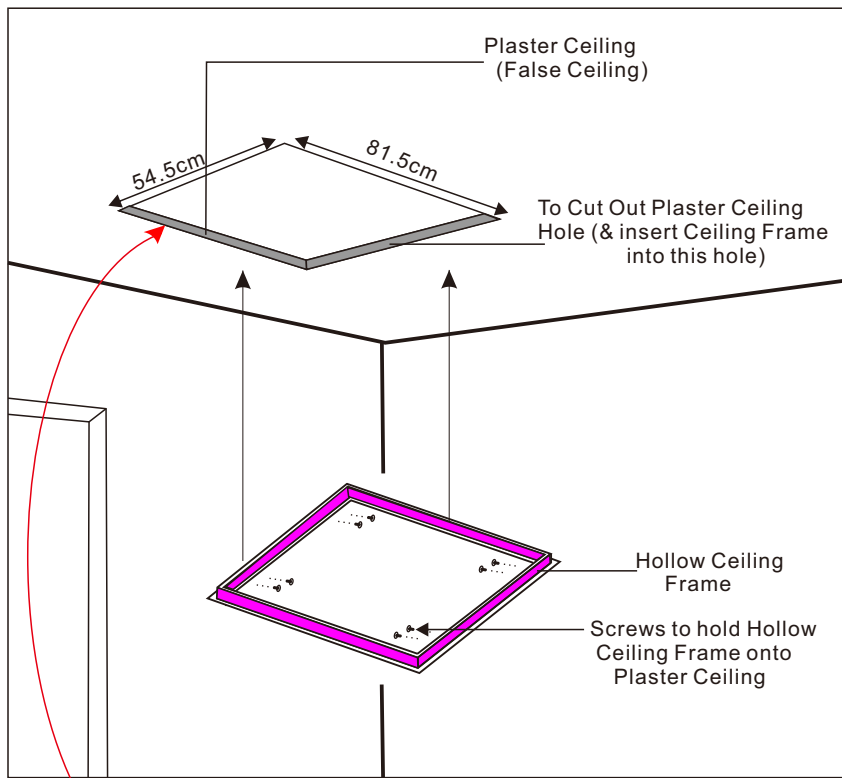


Step 1

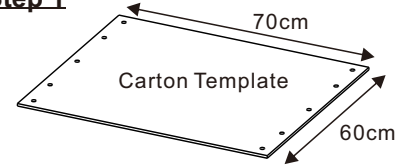


Carton Paper Template for Ease of Marking Hole Position.

Step 2

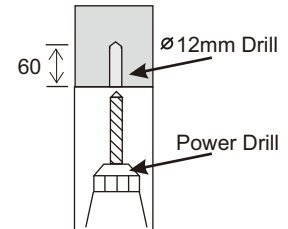


Drill Dia. 12mm holes to a depth of 60mm.
(Note: Do not drill too deep)


Step 3

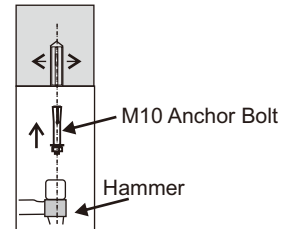


Insert M10 anchor into the hole.
Use pin punch to expand the anchor.

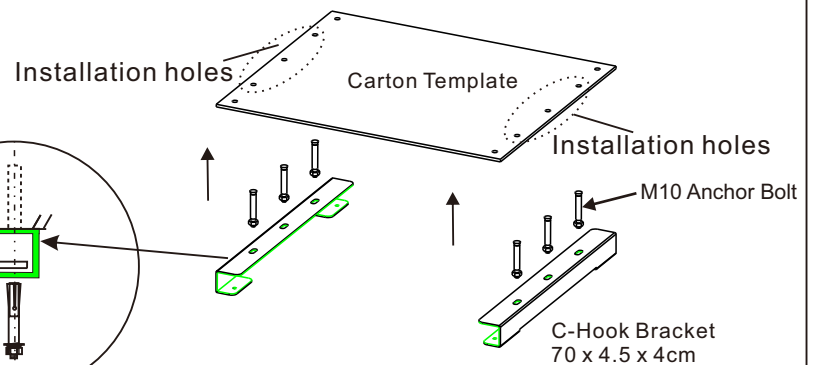


Step 4

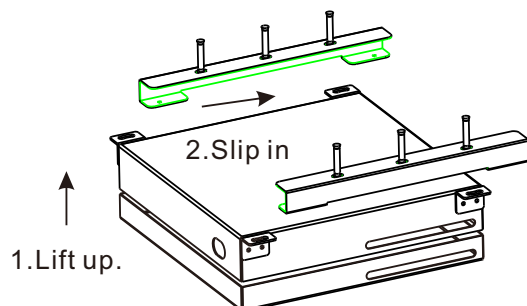


Step 5

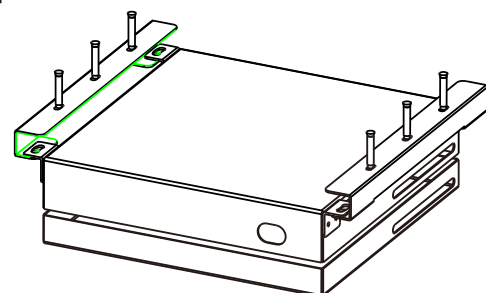

Step 6

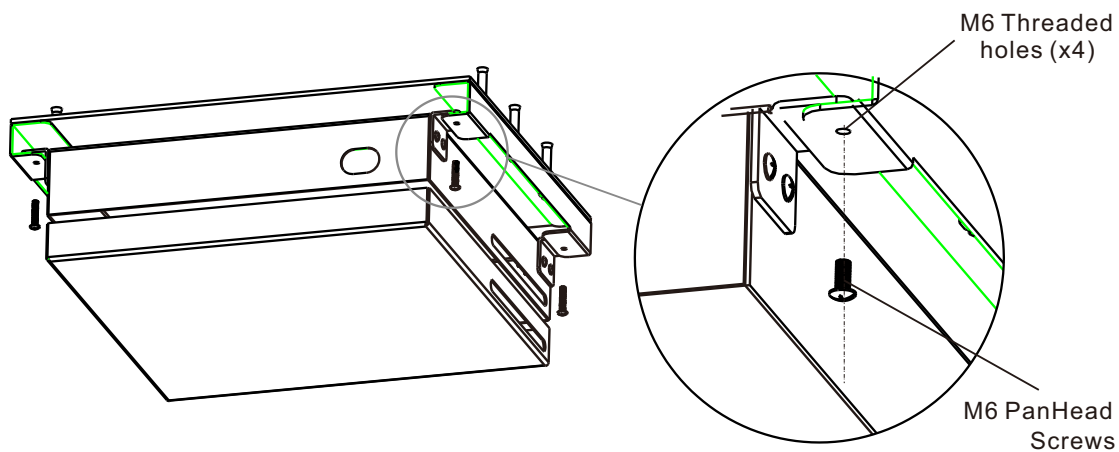


Step 7

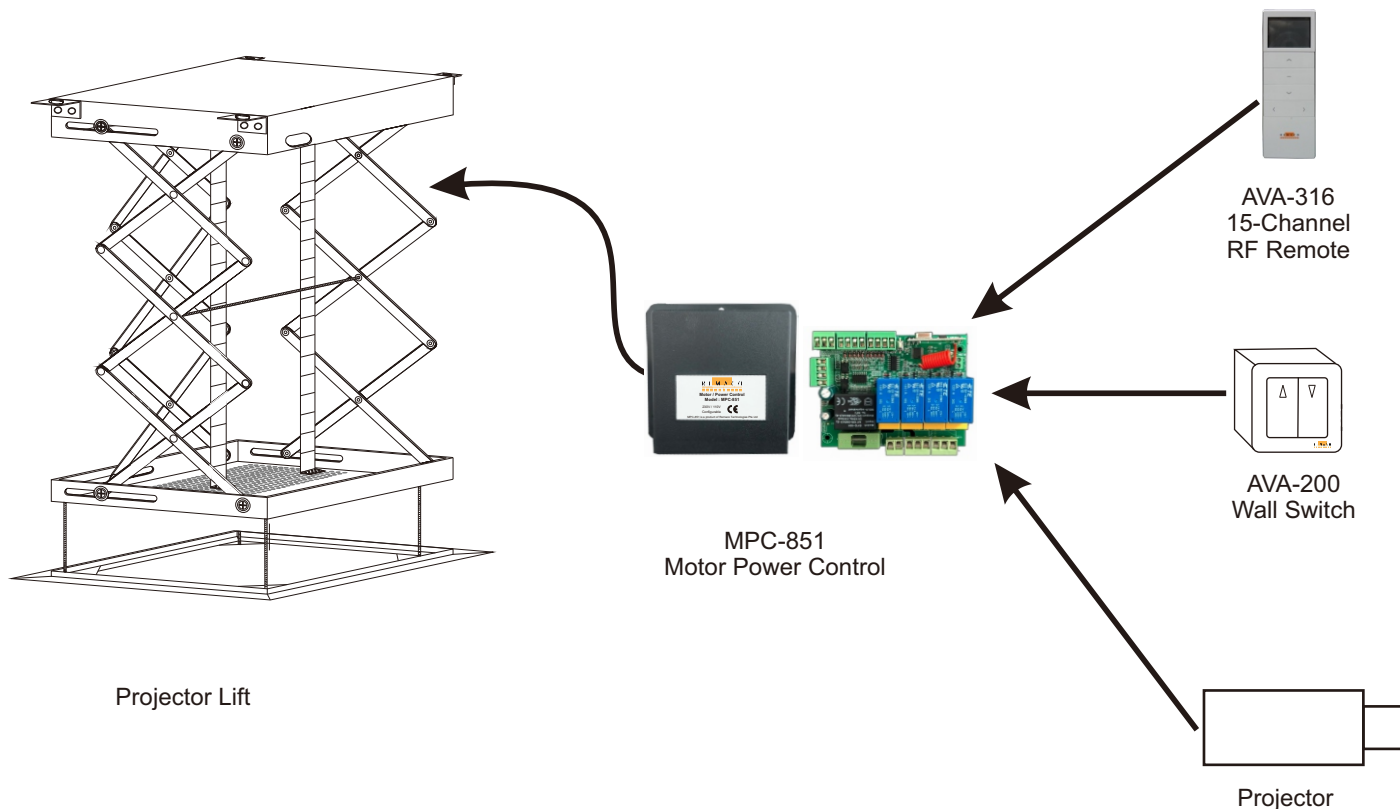

⚠ Connection of all cables to the MPC-851 (Refer to Installation Guide of MPC-851)


Step 8

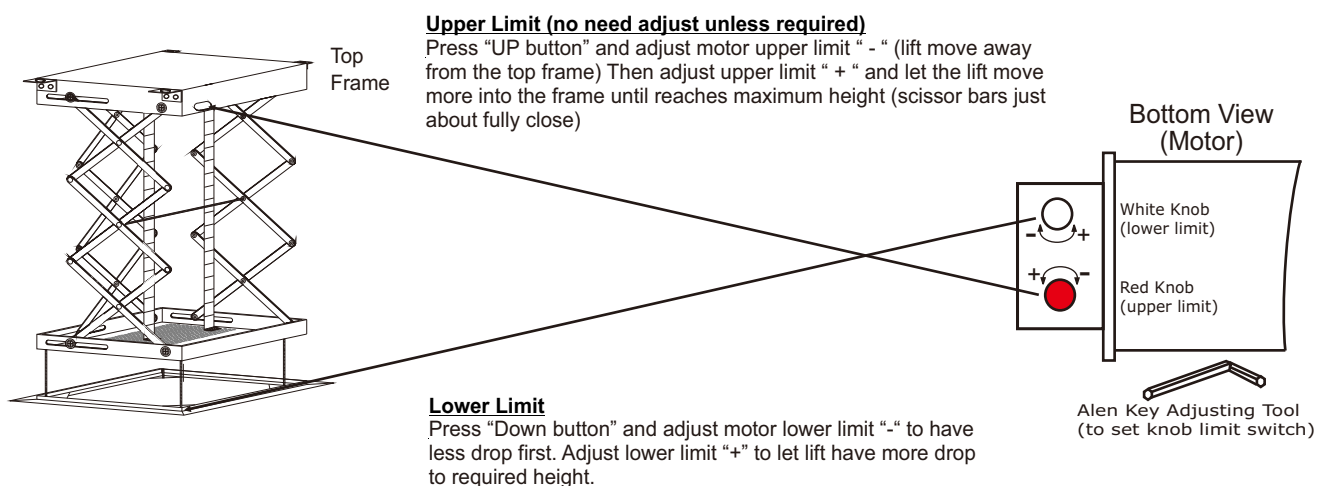


Important Note

Do not adjust the Upper Limit of the lift higher than the original factory preset position. If adjusted, the lift will move into the frame and be stopped by force and not the Upper Limit Switch. This will cause overheating of the motor, rendering the lift to be unable to operate properly.


Step 9

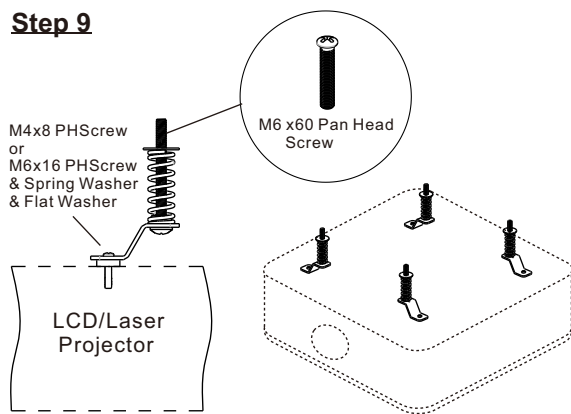


Step 10

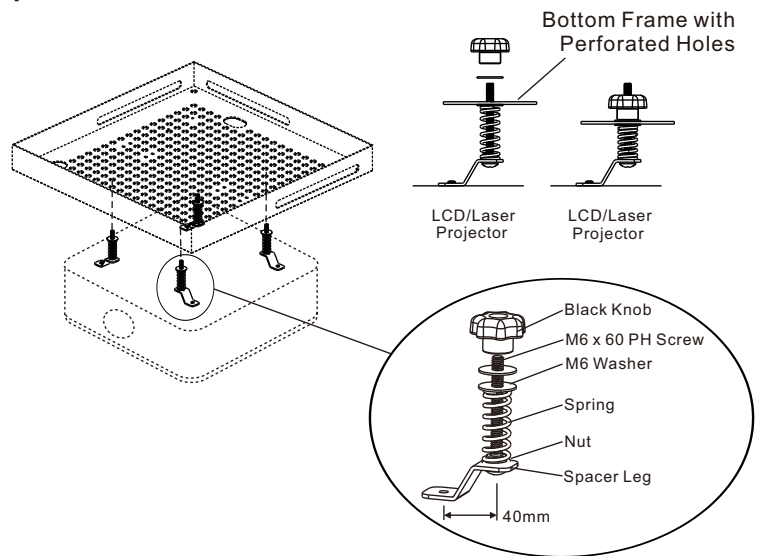


Step 13

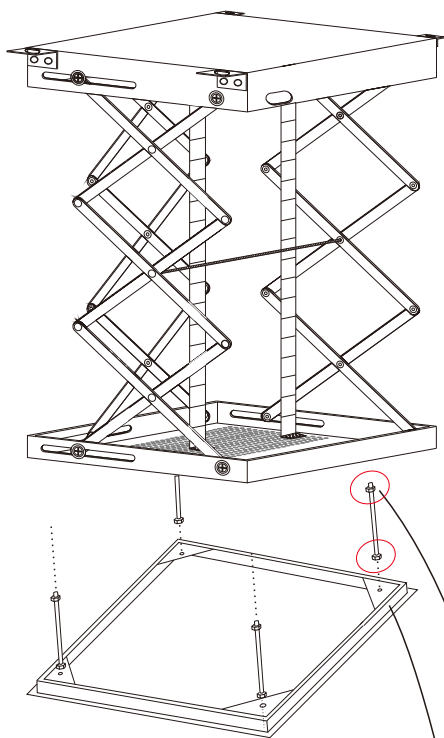


Step 11

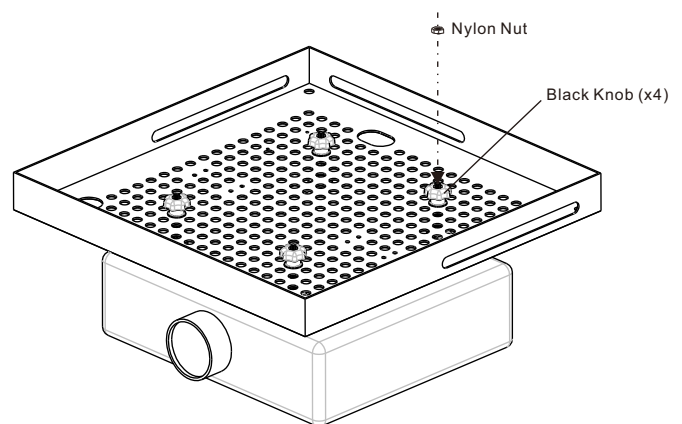

Step 12

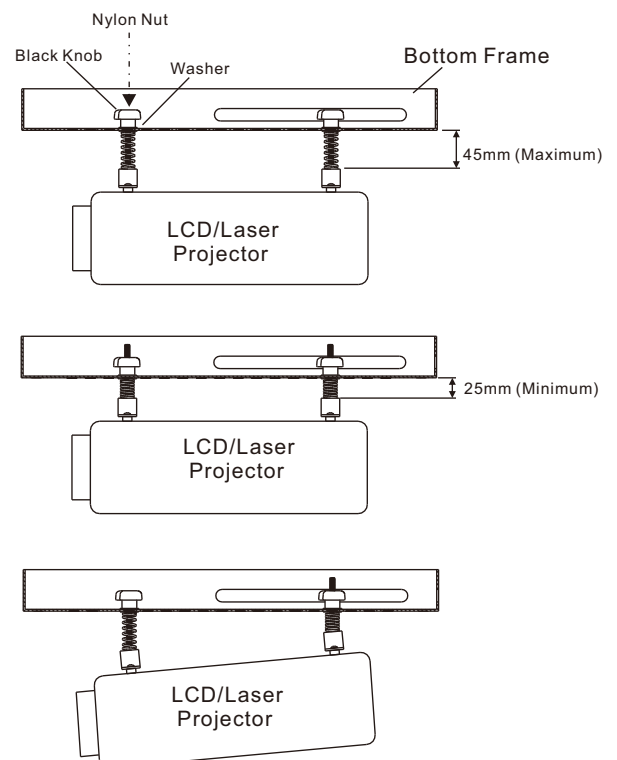

M8
Threaded
Rod

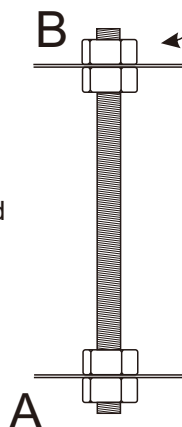

End