



How to view ESC-ip Source Code

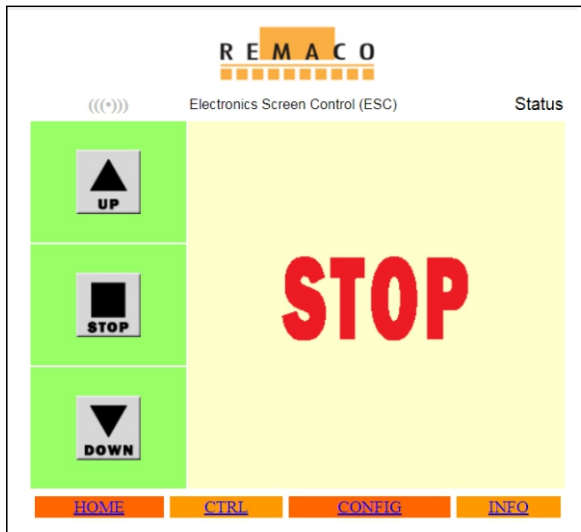

From any browser:


IP Address: 192.168.1.97
Main Page: view-source:192.168.1.97/
Java Script: 192.168.1.97/esc.js

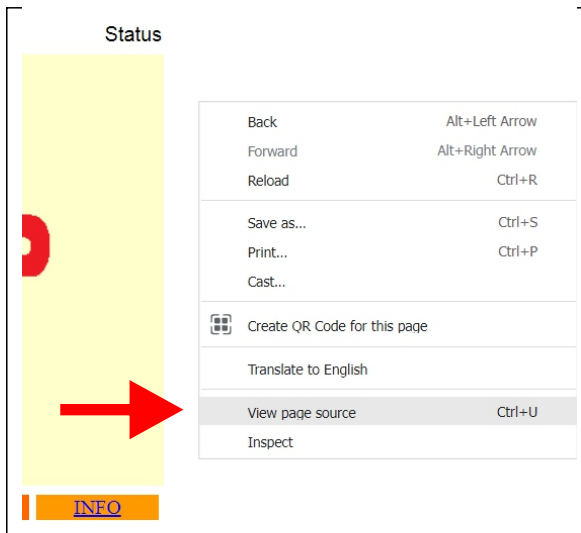

From ESC-ip main page

IP Address: 192.168.1.97

1. Right click on the page and select view page source or type in the browser “ **view-source:192.168.1.97/** ”
It will redirect to the ESC-ip’s main page HTML code.

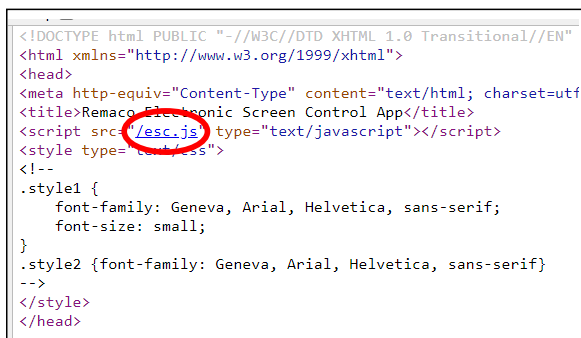


ESC-ip main page HTML Code

This is only the design of the main page

HTML Address: view-source:192.168.1.97/

2. From the HTML code, click the “ **esc.js** ” or type in the browser “ **192.168.1.97/esc.js** ”

It will redirect to the ESC-ip’s main page HTML code.

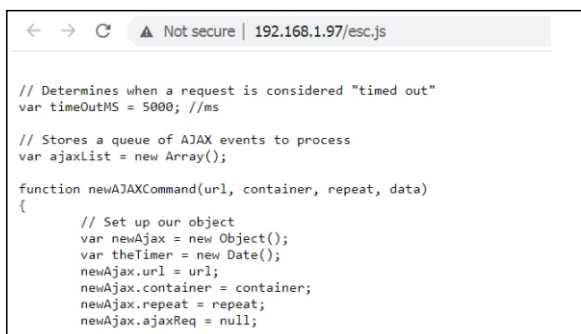

ESC-ip Java Script Code

The code that controls the motor (UP, STOP, DOWN)

JAVA Script Address: 192.168.1.97/esc.js