
### V: 13

# Installation Guide / Manual - TEN XXL Screen

TEN(XXL)

Warning

All products are thoroughly inspected and fully tested operational in factory. We accept no liability whatsoever for any losses due to improper operation, or any unauthorized alternation. All trademarks contained in this installation guide are the property of their respective owners.

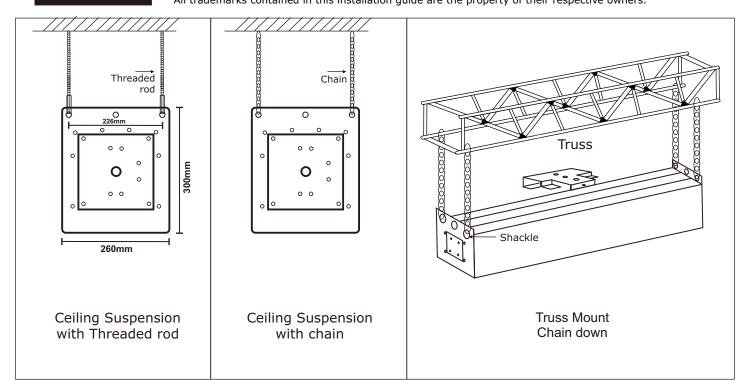


### Accessories Included:


Front

Back




Surface Box

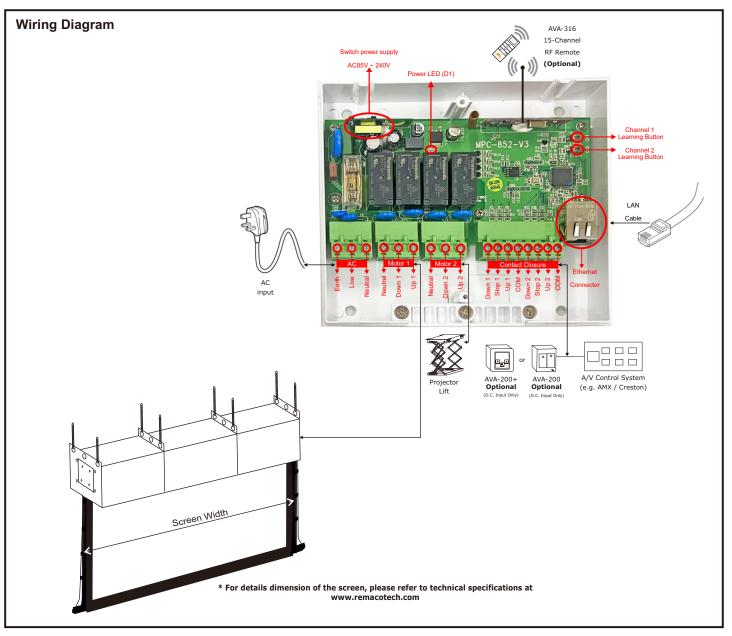

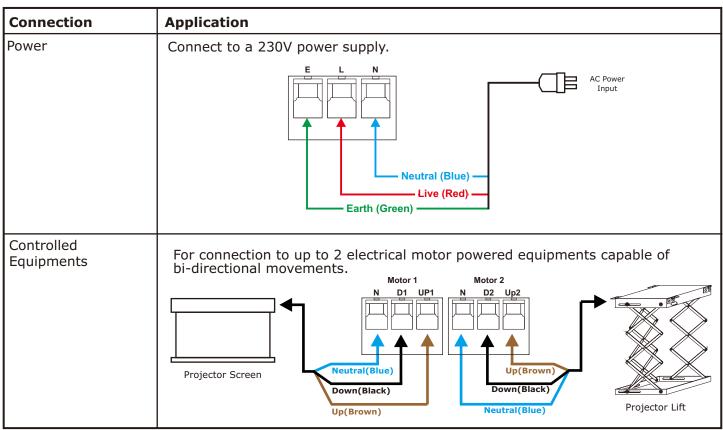

# Contact Closure (Momentary) For control by an A/V control system (e.g. AMX or Creston) or a Touch-Contact Switch (Remaco AVA-200+) \* For this zero voltage Contact Closure, any DC voltage exceeding 3V might damage the MPC \* Works on momentary contact closure only. (Dry contact, normally open) AVA-200+ Outpring (Dry contact, normally open)

To set screen to your desired "up" and "down" positions.

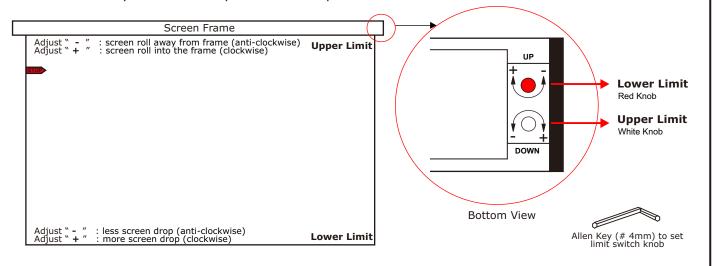

To set screen to your desired "up" and "down" positions.

### **Important Note**

The upper limit and lower limit of the screen had been preset in factory. Any adjustment to these 2 limit switches may cause damages to the screen fabric. If adjusted, it will cause the following problems:

- a) The screen will roll into the frame and stop by force and not by the Upper Limit switch. This will cause overheating of motor which unable the screen to operate properly.
- b) The depression of the bottom bar onto the fabric will cause horizontal mark on screen surface.
- c) Adjusting the <u>Lower Limit</u> of the screen any lower than beyond the <u>STOP</u> sticker may cause the fabric to drop off

### **Disclaimer**

Any adjustment to these 2 limit switches will void the warranty for the screen and Remaco will hold no responsibility for any damages to it. Please consult us if it is necessary to do any adjustment to the limit switch.



### MPC-851 compatible with AVA-316 15-Channel Radio Frequency Remote



AVA-316-RF 15Ch


### Setting Number of Channels Used AVA-316 15-Channel RF Remote



### Pairing MPC-851 with AVA-316-RF 15 Ch

- 1. Connect motors and power to MPC according to diagram.
- 2. Switch on power supply.
- 3. Press and hold the learning button, do not release. Motor will step-move up and down
- 4. Wait for LED to start flashing, and then release holding the Learning Button (Wiring Diagram Page 2).
- 5. To pair motor 1, set the channel at the AVA-316 RF remote to "1".
- 6. Press the "UP" button. Motor 1 will step-move up and down. LED stops flashing. AVA-316 RF remote CH1 is now paired with motor 1.
- 7. To pair motor 2, repeat above step 1 to 6
- \*\* If nothing is pressed within 20 seconds, motor will revert back to working mode automatically with a step move up and down.

### **Details action and observation:**

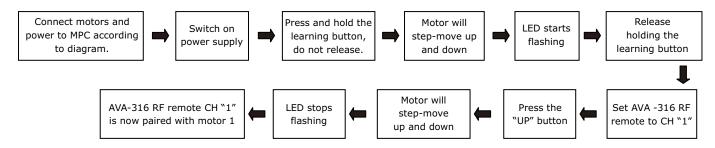

# OPTION 2

## **Control by Network IP Address**

### **Connecting to Network IP**

- Connect MPC-852 to the local Ethernet connection
- Connect PC or Laptop or Mobile to LAN or WiFi.

Must be connected to the same network.

- Go to browser (Google Chrome recommended)
- Type in the initial IP Address is 192.168.1.200
- Login Details

User name: admin Password: mpc852

# For more information (Website):

www.remacotech.com > Downloads > Installation Guides > Remote Controls, Electronics & Accessories > MPC-852